Eclipse È

Synchro Mesh Useage

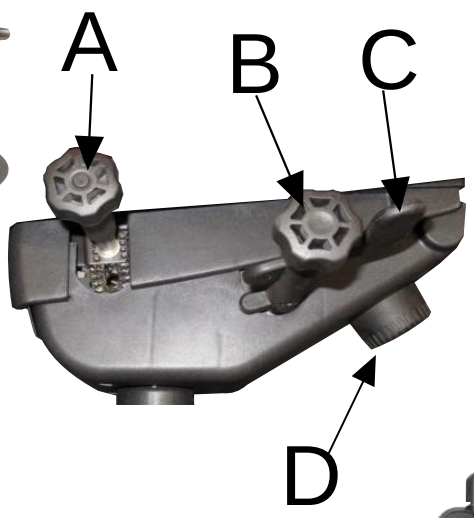

Seat Angle Adjustment Knob

A

Clockwise to tighten and fix in place the seat angle

Counter Clockwise to unlock and adjust seat angle
Allows for seat angle preference adjustment

Chair Rock Tilt Lock Knob

B

Clockwise to Lock chair rock Tilt Mechanism
stops chair rocking

Counter Clockwise to UnLock chair rock Tilt Mechanism
Allows chair to rock back and forward

Gas Lift Trigger lever

C

Simple push down operation to adjust
height of chair -- Gas Lift --

IMPORTANT

Tension Knob Adjustment

D

It is important to ensure tension knob is adequately tightened to suit the users weight if chair rock function is to be used

Tension Knob Adjustment

D

Clockwise to tighten
heavier people

Counter Clockwise to loosen
Lighter People

Eclipse È

EclipseÈ brands owned and trademarked by the Global Group of companies